

EMTEK®
ASSA ABLOY

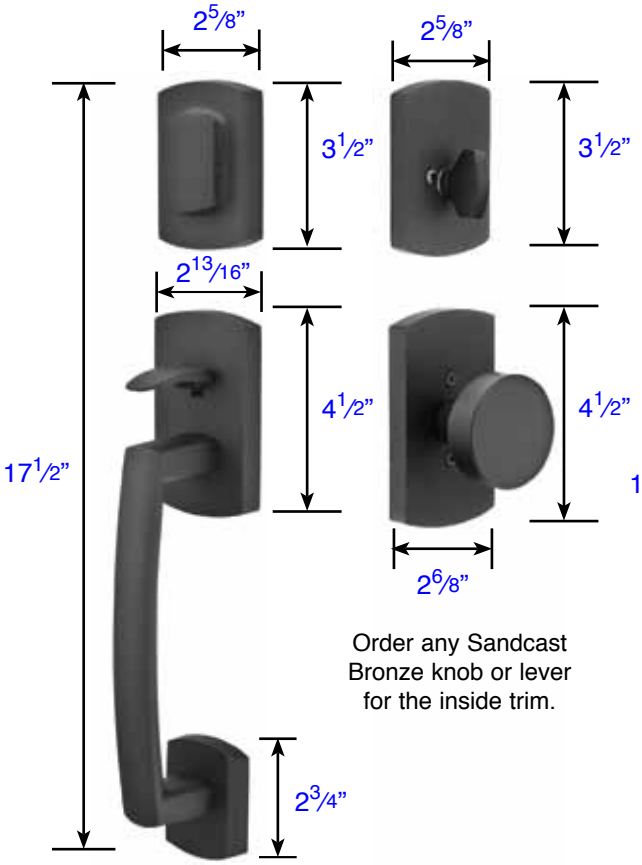


Order any Sandcast Bronze knob or lever for the inside trim.


Ridgemont Trim
Part # 451721

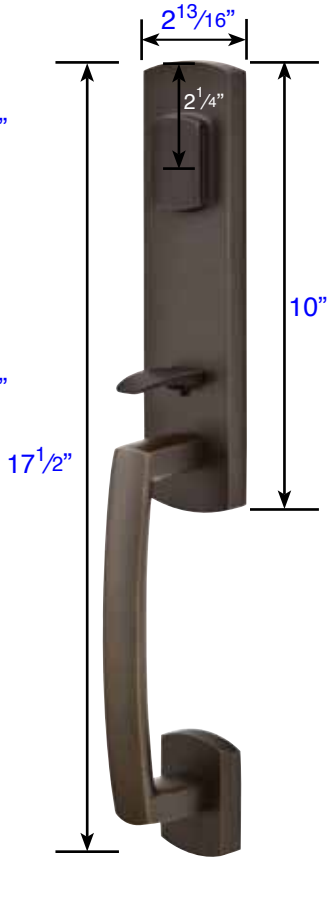

Logan Trim
Part # 451822

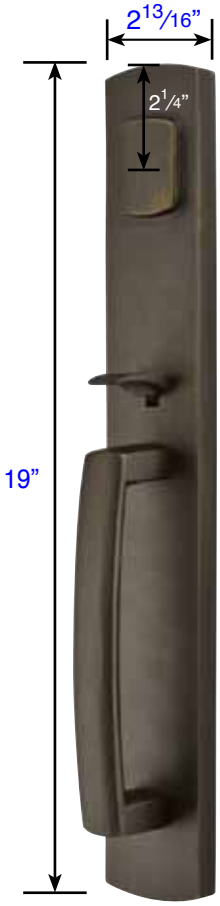

Brighton Trim
Part # 450923

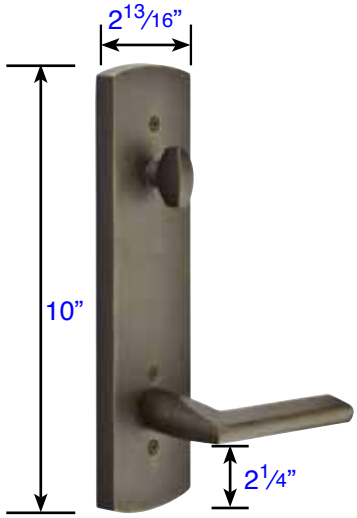

Order any Sandcast Bronze knob or lever for the inside trim.

Standard with Tubular Locks

- Standard 2 ⅛" Door Prep
- Schlage C Keyway

Additional Dimensions: (Part # 451721)

- Exterior Projection is 2 ⅞"
- Interior Projection Depends on Handle Style
- Overall Grip thickness: 1 1⁄16"
- Clearance between door & grip: 2"
- Standard Interior trim dimensions same as 7100 and 8474.
- Plates thickness: ½"

Same Dimensions for Dummy Function

Additional Dimensions: (Part # 451822/450923)

- Exterior Projection is 2 ⅞"
- Interior Projection Depends on Handle Style
- Overall Grip thickness: 1 1⁄16"
- Clearance between door & grip: 1 ½"
- Plates thickness: ½"

Same Dimensions for Dummy Function

Sandcast Bronze Tubular Entryset Sectional, Single Cylinder

Ridgemont (453727), Logan (453828)

- Standard Door Thickness: 1 1/2"- 2"

Standard Components:
- 1 1/2" & 2" Rosette Screws
- Single Cylinder Tailpiece
- Outside Entry Spindle
- Inside Passage Half Spindle
- 2 1/2" Deadbolt Mounting Screws
- Full-Lip Strike Plate
- Deadbolt Strike Plate

- *Extended* Door Thickness: 2"- 2 1/2"

Extended Components:
- 2" Rosette Screws
- Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- Long Inside Passage Half Spindle
- 3" Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate

- *Extended* Door Thickness*: 2 1/2"- 2 7/8"

Extended Components:
- 2 1/2" Rosette Screws
- Extra Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- Extra Long Inside Passage Half Spindle
- 3 1/2" Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- 3" Bottom Screw Required for Logan

* 3" Bottom Screw for Ridgemont Style Available Upon Request

Sandcast Bronze Tubular Entryset Sectional, Double Cylinder

Ridgemont (454727), Logan (454828),

- Standard Door Thickness: 1 3/4"- 2"

Standard Components:
- 1 1/2" Rosette Screws
- Double Cylinder Tailpiece
- Outside Entry Spindle
- Inside Passage Half Spindle
- 2 1/2" Deadbolt Mounting Screws
- 3" Deadbolt Screw for Logan
- Full-Lip Strike Plate
- Deadbolt Strike Plate

- *Extended* Door Thickness: 2 1/4"- 2 5/8"

Extended Components:
- 2" & 2 1/2" Rosette Screws
- Long Double Cylinder Tailpiece
- Long Outside Entry Spindle
- Long Inside Passage Half Spindle
- 3" & 3 1/2" Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate

Sandcast Bronze Tubular Full Length Entryset, Single Cylinder

Brighton (453929)

- Standard Door Thickness: 1 1/2"- 2"

Standard Components:
- 1 1/2" & 2" Rosette Screws
- Single Cylinder Tailpiece
- Outside Entry Spindle
- Long Inside Passage Half Spindle
- 2 1/2" Deadbolt Mounting Screws
- Full-Lip Strike Plate
- Deadbolt Strike Plate

- *Extended* Door Thickness: 2"- 2 1/2"

Extended Components:
- 2" Rosette Screws
- Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- Long Inside Passage Half Spindle
- 3" Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- 1 ½" Screw for Mounting Plate

- *Extended* Door Thickness: 2 1/2"- 2 7/8"

Extended Components:
- 2 1/2" Rosette Screws
- Extra Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- Extra Long Inside Passage Half Spindle
- 3 1/2" Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- 3" Bottom Screw Required

Sandcast Bronze Tubular Full Length Entryset, Double Cylinder

Brighton (454929)

- Standard Door Thickness: 1 3/4"- 2"

Standard Components:
- 1 1/2" Rosette Screws
- Double Cylinder Tailpiece
- Outside Entry Spindle
- Long Inside Passage Half Spindle
- 2 1/2" & 3" Deadbolt Mounting Screws
- Full-Lip Strike Plate
- Deadbolt Strike Plate

- *Extended* Door Thickness: 2"- 2 5/8"

Extended Components:
- 2" & 2 1/2" Rosette Screws
- Long Double Cylinder Tailpiece
- Long Outside Entry Spindle
- Long Inside Passage Half Spindle
- 3" & 3 1/2"Deadbolt Mounting Screws
- Spindle Extensions
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate

Ridgemont Trim	Logan Trim	Brighton Trim
		

Double Sided Handleset



Single Cylinder	Part # 453727	Part # 453828	Part # 453929
Double Cylinder	Part # 454727	Part # 454828	Part # 454929

Standard with Grip By Grip Handleset

- Standard 2 ⅛" Door Prep
- Schlage C Keyway

Available Finishes: Flat Black (FB), Medium Bronze (MB)

Dimensions for ***Grip-By-Grip Entrance*** are the same as the Exterior Trim of standard grip handlesets.

Grip-By-Grip Tubular Entryset, Single Cylinder

Ridgemont (453727), Logan (453828), Brighton (453929)

- Standard Door Thickness: 1 5/8"- 2"

Standard Components:

- 1 1/2" & 2" Rosette Screws
- Single Cylinder Tailpiece
- Outside Entry Spindle
- Inside Passage Half Spindle
- For 1 5/8" thick door, use 2" Deadbolt Mounting Screws
- For 2" thick door, use 2 1/2" Deadbolt Mounting Screws
- Full-Lip Strike Plate
- Deadbolt Strike Plate
- 3" Screw For Grip

- *Extended* Door Thickness: 2"- 2 1/2"

Extended Components:

- 2" & 2 1/2" Rosette Screws
- Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- 3" Deadbolt Mounting Screws
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- For 2 ½" thick door, 3 ½" Screw for Grip

- *Extended* Door Thickness: 2 1/2"- 3"

Extended Components:

- 2 1/2" & 3" Rosette Screws
- Extra Long Single Cylinder Tailpiece
- Long Outside Entry Spindle
- 3 1/2" Deadbolt Mounting Screws
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- Need Longer Screws For Grip and Housing
- Includes 3 ½" Screw for Grip

Grip-By-Grip Tubular Entryset, Double Cylinder

Ridgemont (454727), Logan (454828), Brighton (454929)

- Standard Door Thickness: 1 5/8"- 2 1/8"

Standard Components:


- 1 1/2" Rosette Screws
- Double Cylinder Tailpiece
- Outside Entry Spindle
- 2 1/2" & 3" Deadbolt Mounting Screws
- Full-Lip Strike Plate
- Deadbolt Strike Plate
- Include 3" Screw for Grip

- *Extended* Door Thickness: 2 1/8"- 3"

Extended Components:

- 3" Rosette Screws
- For 2 ⅛" thick door, use 2" Screw for Rosette
- Long Double Cylinder Tailpiece
- Long Outside Entry Spindle
- 3" & 3 1/2" Deadbolt Mounting Screws
- Extended Full-Lip Strike Plate
- Deadbolt Strike Plate
- Include 3" and 3 ½" Screw for Grip

Face and Strike Plates

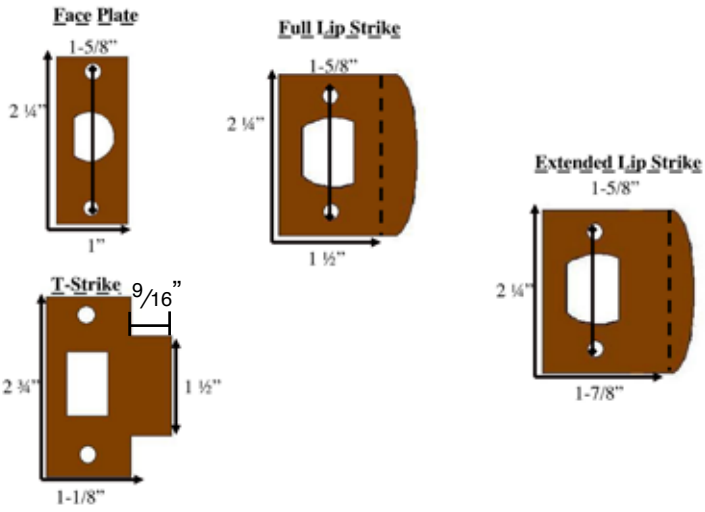

Deadbolt Strike Plates

